

Enforce Ports Compatibility mode

Enforce Ports Compatibility mode restricts connections and persists clearly visible only compatible ports ([Flow Port](#), [Full Port](#), [Proxy Port](#)) in [SysML Internal Block Diagram](#) and [Constraint Parameters](#) in [SysML Parametric Diagram](#). Non compatible elements become transparent.

To use **Enforce Ports Compatibility** mode

1. Switch to **Enforce Ports Compatibility** mode.
 2. Create the connection between ports ([Flow Port](#), [Full Port](#), [Proxy Port](#)) or [Constraint Parameters](#).
- All ports and [Constraint Parameters](#) that are compatible to connect persist clearly visible.

